


INSTALLATION AND OPERATING INSTRUCTIONS

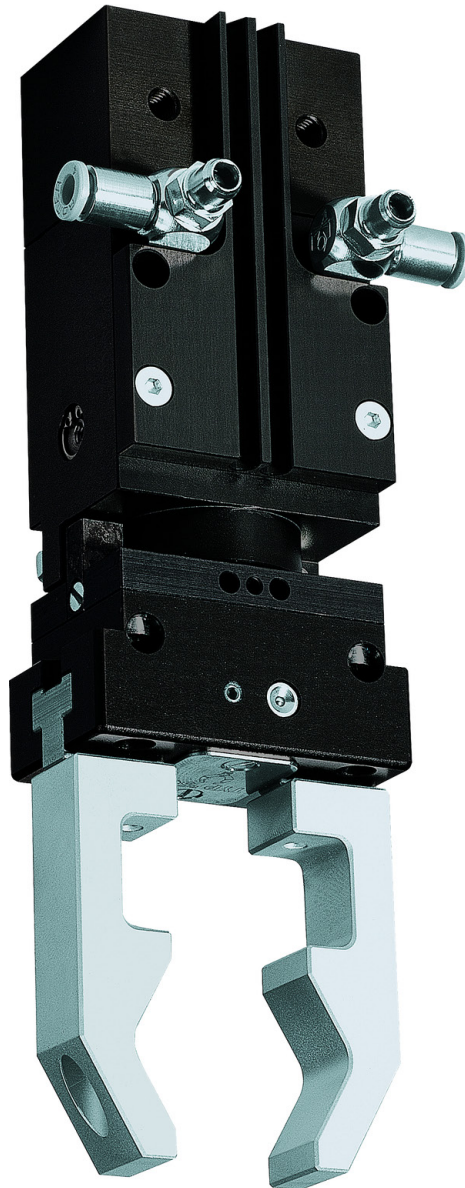

Handling Technology

DGP series
2-jaw parallel rotary gripper

THE KNOW-HOW FACTORY

1. Supporting documents

NOTE:

The following documents are available for download on our website. Only the documents currently obtained via the documents are valid.

- Catalog
- Drawings, performance data, information about accessory parts, etc.
- Technical data (data sheets)
- General terms and conditions, including warranty information


2. Proper use

NOTE:

The DGP series of rotary grippers should only be used in its original state with its original accessories, without any unauthorized changes and within the scope of its defined parameters for use. Zimmer GmbH accepts no liability for any damage caused by improper use.

The gripper is designed for operation with compressed air only. For operation with other media such as fluids or gases. The gripper is used as defined under "Proper use" in enclosed rooms for gripping, handling and holding parts for short periods. It is not suitable for clamping workpieces during the machining process and is not suited to direct contact with perishable goods.

	DGP404N	DGP404NC	DGP404NO
Torsional moment M_r [Nm]	8	8	8
Tilting moment, horizontal axis M_x [Nm]	15	15	15
Tilting moment, vertical axis M_y [Nm]	10	10	10
Max. permitted force F_a [N]	300	300	300

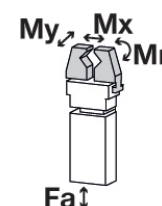

Only the accessories permitted for this type series are allowed to be installed on the rotary grippers.

⇒ Regarding this, see Handling Technology catalog

3. Safety notes

1. Installation, commissioning, maintenance and repairs may only be undertaken by qualified experts in accordance with these installation and operating instructions.
2. The gripper is state-of-the-art. It is fitted to industrial machines and is used to hold workpieces. Hazards can originate from the gripper only in the following situations (for example)
 - it is not properly fitted, used or maintained
 - it is not used for its intended purpose
 - failure to observe the local regulations (legislation, decrees, guidelines), such as the EC Machinery Directive
 - failure to observe the Accident Prevention Regulations, the VDE guidelines and assembly and operating instructions.
3. The gripper may be used only in accordance with its proper use and technical data. ZIMMER GmbH shall accept no liability for any damage caused by improper use.



4. Any use other than the intended use requires written approval from Zimmer GmbH.



5. Do not reach into the operating range of the gripper.



6. Make sure that the energy supply is disconnected and that there is no pressure in the handling system before you fit, set, retool, maintain or repair the gripper.



7. In case of maintenance, renovation or expansion work, remove the gripper from the machine and carry out the work outside the danger zone.



8. When commissioning or testing, make sure that the gripper cannot be actuated by mistake.

9. Modifications to the swivel jaws, such as adding drill holes or threads, may be made only with prior approval from Zimmer GmbH.

10. The specified maintenance intervals and compressed air quality specifications should be observed, refer to the Maintenance section. When using the gripper under extreme conditions (see Item 11), the maintenance interval must be adapted depending on the extent of the contamination. Please contact our hotline for this purpose.



11. Use of the swivel jaws under extreme conditions, such as aggressive liquids and abrasive dust, is subject to prior approval from Zimmer GmbH.



12. When disassembling handling systems with integrated springs, exercise increased caution because of the **spring tension that is always present**.



4. Function

The 2-jaw parallel rotary gripper of the DGP series. Gripping and swiveling motions can be carried out simultaneously. The swivel angle of 90° or 180° can be selected as desired by the user using corresponding mechanical limit stops. The rotational speed can be adjusted using an air flow control valve.

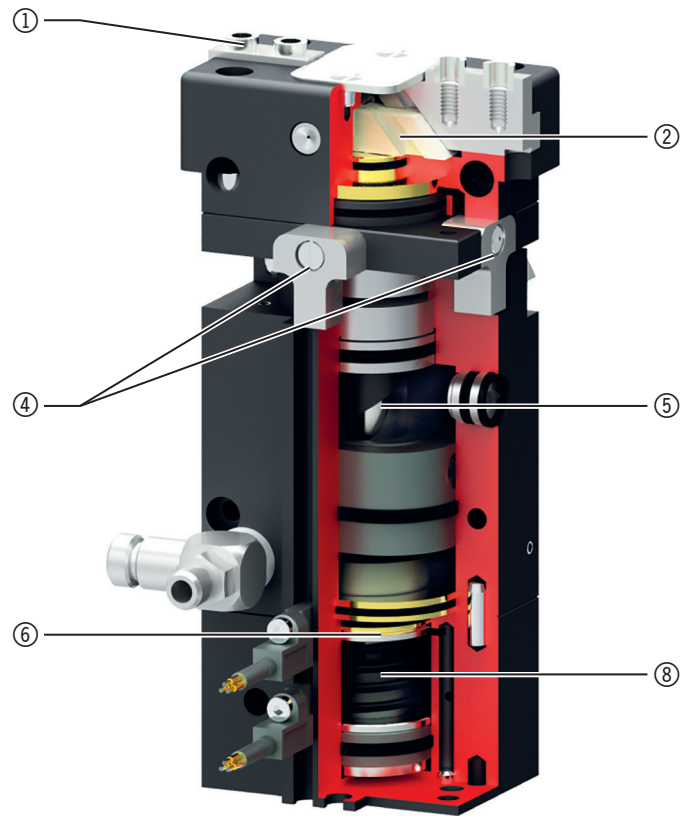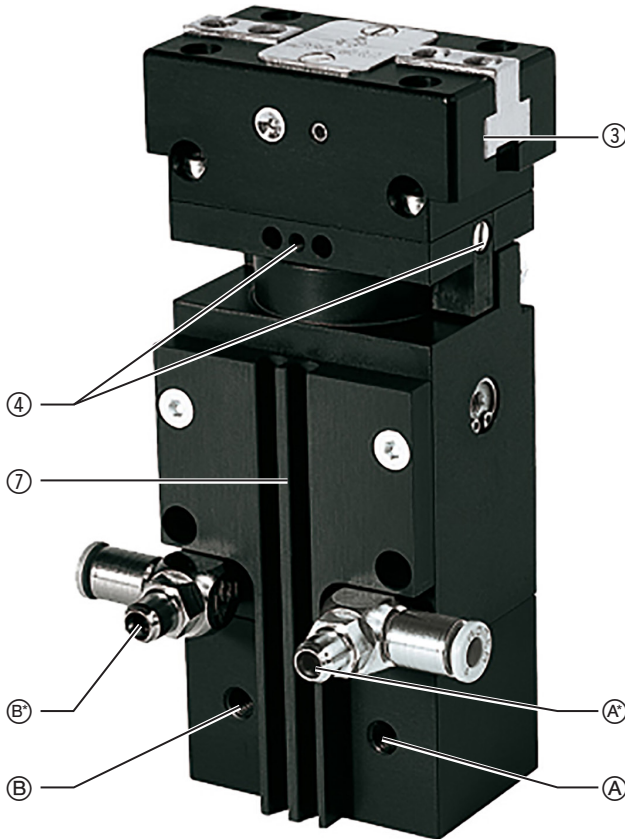

- ① : **Removable centering sleeves**
Quick and economical positioning of the gripper finger
- ② : **Positive-drive wedge hook transmission**
Synchronized gripper finger movement
- ③ : **Precise T-slot guide**
High force and torque support
- ④ : **End position 90°/180° adjustment**
End stops included in the scope of delivery for 0°/90°/180°
- ⑤ : **Rotating-drive mechanism**
Robust and low-wear
- ⑥ : **Pneumatic drive**
Two double-acting pneumatic rotor cylinders
- ⑦ : **Groove for magnetic field sensors**
Sensing of rotational position and gripper finger position
- ⑧ : **Integrated gripping force safety device**
Spring integrated into cylinder chamber as energy storage
- A B : **Air connection for gripping**
- A* B* : **Air connection for rotating**
With air flow control valve for adjusting the rotational speed

5. Technical data

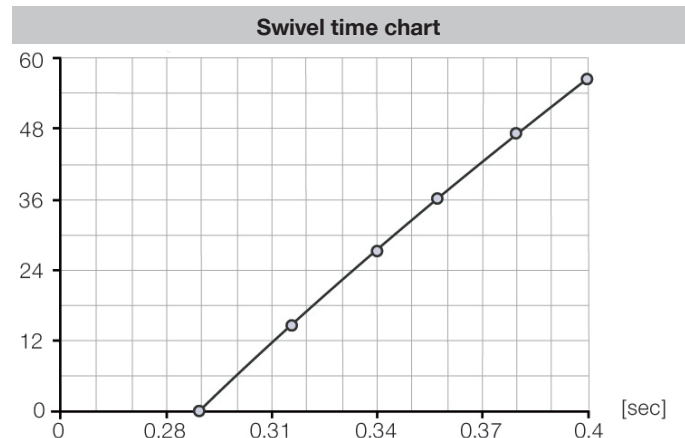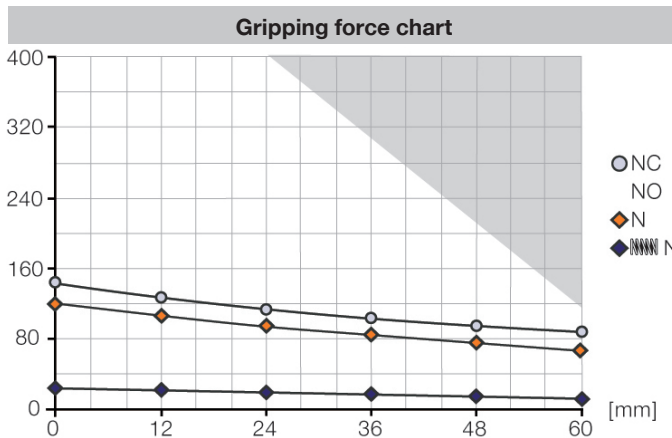

The chart shows the arithmetic total of the individual forces that occur on the gripper fingers, depending on the gripper finger length. The area shaded in gray marks the area where increased wear is to be expected.

The chart shows the swivel time depending on the moment of inertia.

		DGP404N	DGP404NC	DGP404NO
Stroke per gripper jaw	mm	4		
Gripping force during opening	N	115		155
Gripping force during closing	N	115	155	
Gripping force secured by spring	N	40		
Closing time/opening time	s	0.01/0.01	0.015/0.015	
Torque	Nm	0.5		
Repeatability +/-	mm	0.05		
Repeatability +/-	°	0.05		
Axial bearing load	N	960		
Radial bearing load	Nm	10		
Operating pressure	bar	3 to 8		
Operating temperature	°C	+5 to +80		
Cylinder volume per cycle	cm ³	3	5	
Cylinder volume per cycle 90°	cm	4.5		
Cylinder volume per cycle 180°	cm ³	9		
Weight	kg	0.44	0.48	

Please always compare the technical data with the corresponding tables on the Internet at www.zimmer-group.de!

6. Installation



DANGER:


Risk of injury in case of unexpected movement of the machine or system into which the DGP gripper is to be installed.

- ▶ Switch off the energy supply to the machine before all work
- ▶ Secure the machine against being switched on unintentionally
- ▶ Check the machine for any residual energy

The gripper can be fastened from multiple sides by means of the internal thread ⑨ or the screw through-holes ⑩.

For centering the gripper, the pin holes ⑪ are provided.

Strength class of screws: 8.8
 Maximum tightening torque M3: 1.3 Nm
 Maximum tightening torque M4: 3.0 Nm

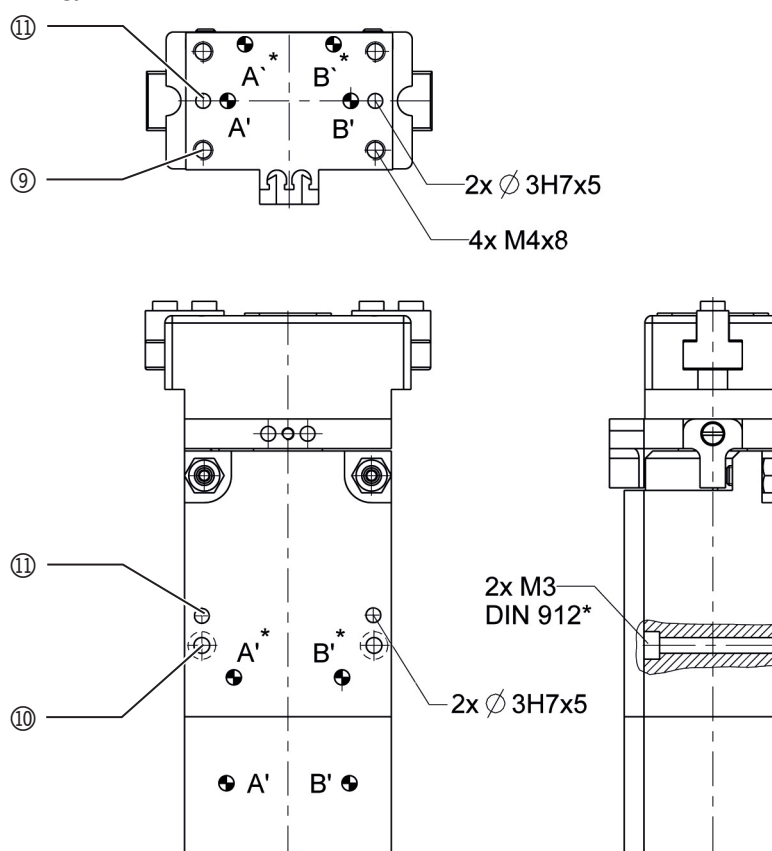


NOTE:

It is mandatory to observe the specified length of the assembly bolts!

6.1 Installing the customer-specific gripper fingers

The customer-specific gripper fingers ⑫ are fastened on the gripper jaws ⑬ via the tapped holes ⑭.

The position of the gripper fingers ⑫ is determined via the centering sleeves ① .

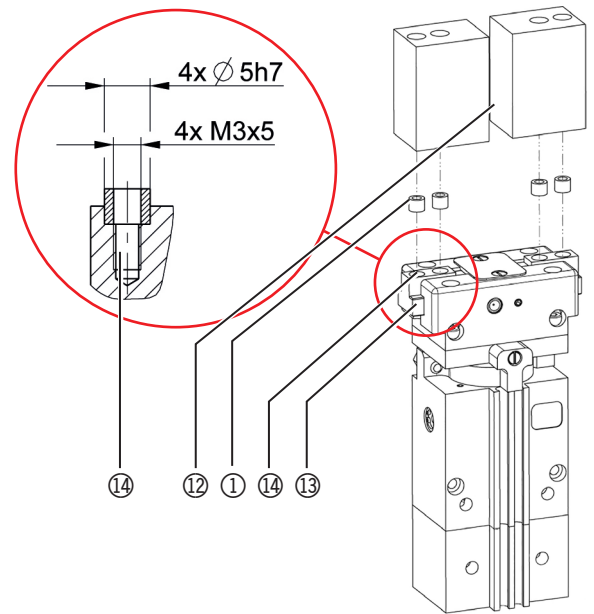


6.2 Installing the pneumatic connections


Gripping

Pneumatic fittings for connecting to the power supply can be mounted directly on the gripper.

For hoseless connection, the adapter plate ⑮ must be configured accordingly with a seal. (Image bottom)

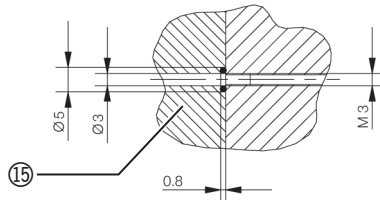

The connections for the power supply of the gripper are identified by **A, B, A', B'** for gripping.

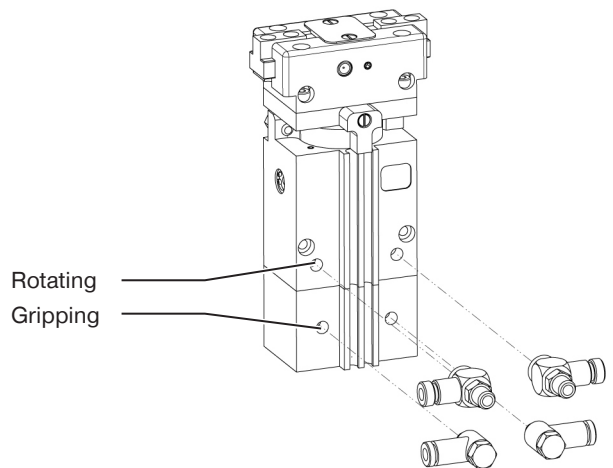




Rotating

Flow control valves for connecting to the power supply are mounted directly on the gripper at the factory.

For hoseless connection, the adapter plate must be configured accordingly.

However, it must always be ensured that the rotary gripper has an air flow control valve and is operated at reduced speed to prevent increased wear. If this gripper is operated with air flow control valve, the warranty claim for this gripper is void.

The connections for the power supply of the gripper are identified by **A*, B*, A'*, B'*** for gripping.

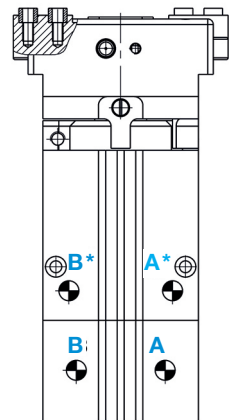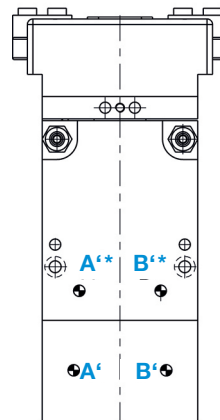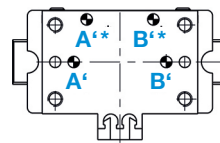


6.3 Setting the swivel angle

The rotary gripper is supplied with a second limit stop as an accessory.

Installing this limit stop ⑩ reduces the swivel angle of the gripper to 90°.

A fine adjustment of the swivel angle in the range of +/- 3° can be configured via the adjustment screw ⑪.

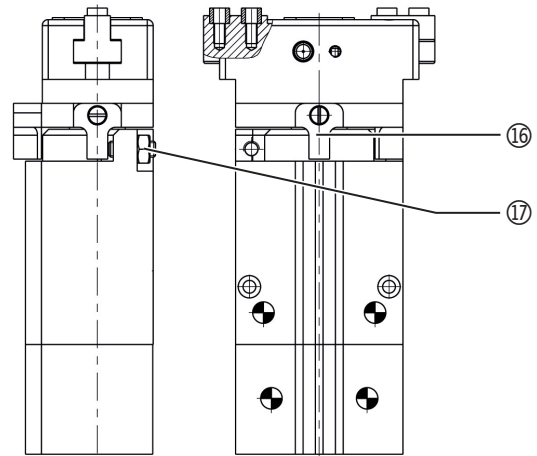

6.4 Setting the magnetic field sensors

The positions of the gripper fingers and the stop positions are detected using magnetic field sensors actuated indirectly via a magnet fastened to the corresponding piston.

After installing the individual gripper fingers, the switching points are adjusted to the workpiece to be gripped and to the end position of the swivel movement.


The positions of the gripping movement are detected using two sensors arranged at the bottom of the drawing and those of the end position are detected using the two sensors arranged on top.

The magnetic field sensor is inserted into the integrated slot ⑦ to set the switch points.

- ▶ Push the magnetic field sensor ⑪ until it reaches the switch-on point (LED on).
- ▶ Mark this point
- ▶ Continue to push the magnetic field sensor until it reaches the switch-off point (LED off).
- ▶ Also mark this point
- ▶ Then push the sensor back again until it reaches the switch-on point (LED on).

The optimum magnetic field sensor position is between the two tagged points.

- ▶ Carry out this adjustment process with each sensor
- ▶ Observe the maximum tightening torque of the attachment screws ⑫.

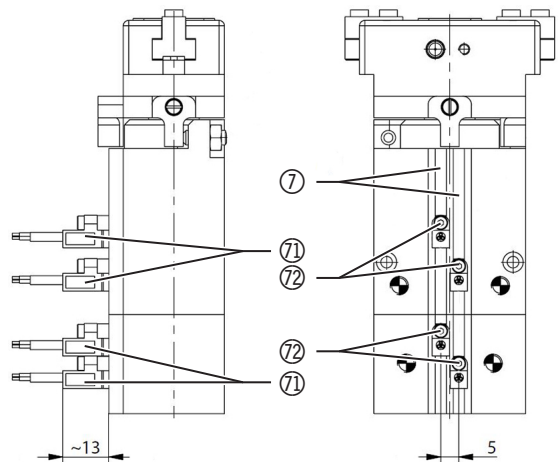

7. Maintenance

The DGP type rotary grippers are maintenance-free for **up to 1,5 million gripping cycles**.

This maintenance-free operation is ensured under the following conditions:

- Drive with filtered compressed air in accordance with EN ISO 8573-1:2001, Class 2.4.1.
- Clean environment
- Use in accordance with performance data

Even though the rotary gripper is, as mentioned, maintenance-free, perform a regular **monthly** check for any corrosion, damage or dirt.

Clean the rotary gripper as needed using a commercially available machine cleaning agent and then apply an anti-corrosion agent to the housing.



INFORMATION:

A complete disassembly of the rotary gripper for maintaining the seal must only be carried out by ZIMMER GmbH.

8. Declaration of incorporation in terms of the EC Machinery Directive 2006/42/EC on Machinery (Annex II 1 B)

In terms of the EU Machinery Directive 2006/42/EC (Annex II 1 B)

Name and address of the manufacturer: Zimmer GmbH, Im Salmenkopf 5, 77866 Rheinau, Germany

We hereby declare that the incomplete machines described below

Product designation: 2-jaw parallel rotary gripper

Type designation: DGP□□□

satisfy the following basic requirements of the Machinery Directive 2006/42/EC:

No. 1.1.2., No. 1.1.3., No. 1.1.5., No. 1.3.2., No. 1.3.4., No. 1.3.7., No. 1.5.3., No. 1.5.4., No. 1.5.8., No. 1.6.4., No. 1.7.1., No. 1.7.4.

We also declare that the specific technical documents were produced in accordance with Annex VII Part B of this Directive.

We undertake to provide the market supervisory bodies with electronic versions of special documents for the incomplete machine through our documentation department, should they have reason to request them.

The incomplete machine may only be commissioned if the machine or system in which the incomplete machine is to be installed has been determined to satisfy the conditions of the Machinery Directive 2006/42/EC and the EC Declaration of Conformity has been produced in accordance with Annex II 1 A.

Authorized representative for compiling the relevant technical documents



Kurt Ross	See manufacturer's address	Rheinau, Germany, 2006-11-16	Martin Zimmer
First name, last name	Address	(Place and date of issuing)	(Legally binding signature) Managing Director

